



### Installation of Automatic Door Assembly

Power up the door closer and lock the door to the open position with the maintenance switch located next to the door controller.

If the glass has been installed, two people will be required to position the door into place.

Install the door in the closed position to allow the door pivot to line up on the bottom and with the top of the door leaning out of the portal



Now stand the door up and rotate door to the open position and install the pivot block



To install the pivot block in the door with isolation bushing facing down.



Now install the two 5/16 bolts provide, using a 3/16 hex head wench.



With the door installed, cycle the door by placing the door controller switch to its normal position. Allow the door to close, and then switch back to the maintenance mode to re-open the door. If all works well place switch back into the normal position for normal operations.



### **Removal of Automatic Door Assembly**

Removal of the automatic door assembly is the reverse of the installation.