



## **Inovonics Wireless Remote Setup**

### **Single Button Setup:**

1. Press the Enter button to access the receiver's option menu.
2. Use the Up and Down buttons to navigate to the INSTALL & SERVICE menu; press the Enter button.
3. Enter a password to access. Default password is 3446; press enter.
4. Screen will show SETUP POINT prompt; press enter.
5. Screen will show SETUP POINT 01; press enter.
6. Screen will show TX NOT REGSTR'D; press enter.
7. Screen will show SPV TIME 60 MIN; press enter.
8. Screen will show SELECT (Up and Down Arrows) SECURITY; press enter.
9. Screen will show 1 ALARM INPUT; press Enter.
10. Set ALARM OUT to 01; press enter.
11. Screen will show ALARM FOLLOWER. Use the Up and Down buttons to change the alarm type to MOMENT; press enter.
12. Use the Up and Down buttons to change time to 00.5 sec; press enter.
13. Screen will show INACTIVE OUT 06; press enter.
14. Screen will show INACTIVE FOLLOWER; press enter.
15. Screen will show TAMPER OUT 06; press enter.
16. Screen will show TAMPER LATCHING; press enter.
17. Screen will show LOW BATT OUT 06. Change to 05; press enter.
18. Screen will show LOW BATT LATCHING; press enter.
19. Screen will show TEXT:. Enter TX1; press enter.
20. Screen will show REGISTER TX? N Set to Y; press enter.
21. Screen will show RESET XMITTER; Press the reset button on the back of the transmitter.
22. Screen will show the registration info for the newly register transmitter.
23. Press enter. The remote is now set up. Exit out of programming or program the next remote. Each individual remote is a SETUP POINT. So for a system with 2 remotes you will set up 2 points. Make sure that the TEXT on the next remote is changed to TX2, TX3, etc.

### **Two Button Setup:**

1. Press the Enter button to access the receiver's option menu.
2. Use the Up and Down buttons to navigate to the INSTALL & SERVICE menu; press the Enter button.





3. Enter a password to access. Default password is 3446; press enter.
  4. Screen will show SETUP POINT prompt; press enter.
  5. Screen will show SETUP POINT 01; press enter.
  6. Screen will show TX NOT REGSTR'D; press enter.
  7. Screen will show SPV TIME 60 MIN; press enter.
  8. Screen will show SELECT (Up and Down Arrows) SECURITY; press enter.
  9. Screen will show 1 ALARM INPUT. Change to 2 ALARM INPUTS; press Enter.
  10. Set ALARM 1 OUT to 01; press enter.
  11. Screen will show ALARM FOLLOWER. Use the Up and Down buttons to change the alarm type to MOMENT; press enter.
  12. Use the Up and Down buttons to change time to 00.5 sec; press enter.
  13. Set ALARM 2 OUT to 02; press enter.
  14. Screen will show ALARM FOLLOWER; press enter.
  15. Screen will show INACTIVE OUT 06; press enter.
  16. Screen will show INACTIVE FOLLOWER; press enter.
  17. Screen will show TAMPER OUT 06; press enter.
  18. Screen will show TAMPER LATCHING; press enter.
  19. Screen will show LOW BATT OUT 06. Change to 05; press enter.
  20. Screen will show LOW BATT LATCHING; press enter.
  21. Screen will show TEXT:. Enter TX1; press enter.
  22. Screen will show REGISTER TX? N Set to Y; press enter.
  23. Screen will show RESET XMITTER; Press the reset button on the back of the transmitter.
  24. Screen will show the registration info for the newly register transmitter.
  25. Press enter. The remote is now set up. Exit out of programming or program the next remote.
- Each individual remote is a SETUP POINT. So for a system with 4 remotes you will set up 4 points. Make sure that the TEXT on the next remote is changed to TX2, TX3, etc.